

# Hand Control DKP3

DKP3 hand control is designed for lifting table. It not only features with 3-digit display for the height, but also supports position memory function that allows user to store up to 4 positions.




## Features

---

- Main applications: Furniture
- Available number of buttons: 7
- Number of memory positions: 4
- 3-digit LED display for height read-out and error code
- Color: Black case with silver panel
- Cable length: 2000mm straight

## Dimensions

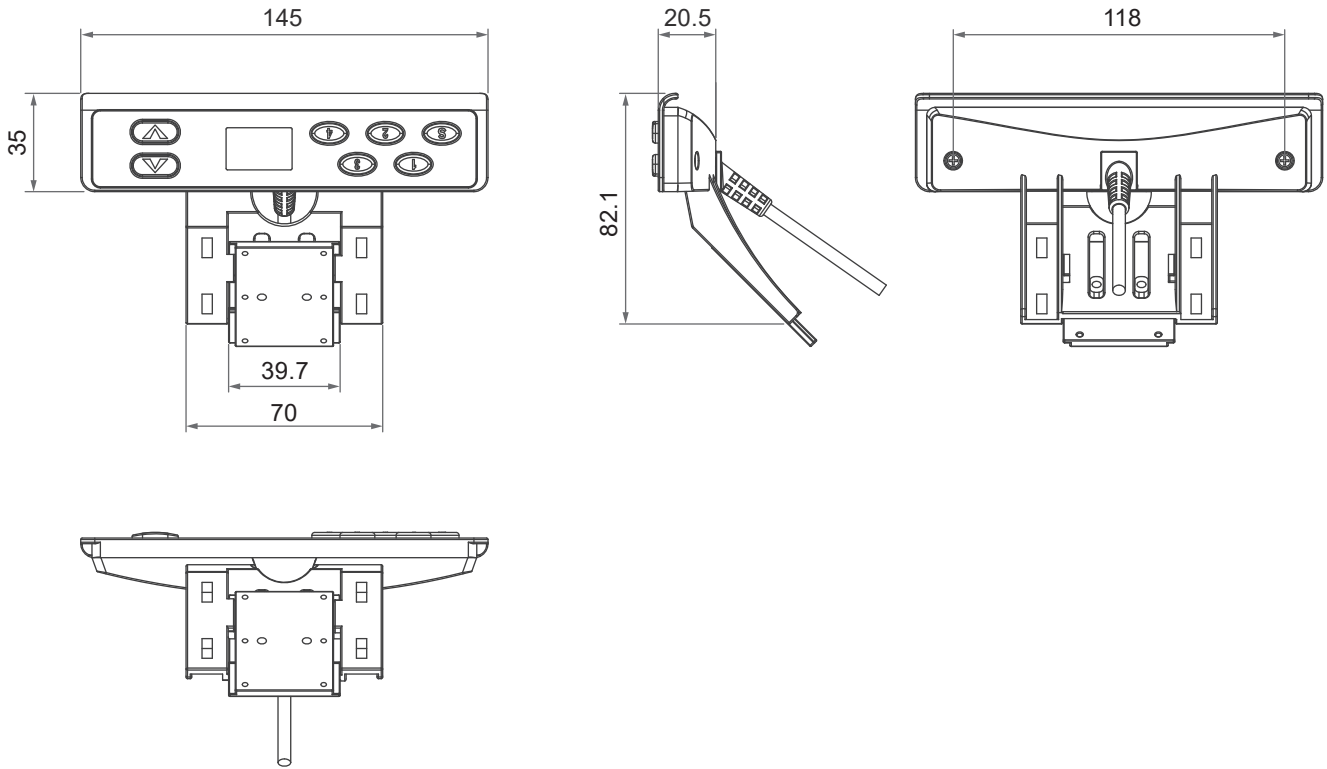

Unit: mm

## Compatibility

| Product     | Model       | DKP3 spec  |
|-------------|-------------|--|
| Control box | CF11D, CF13 | <ul style="list-style-type: none"> <li>• With Moteck E2-type RJ plug (Fig. 1)</li> </ul> |

### Cable plug










Fig.1 E2-type

# Operating Guide

---

## • Interface Guide







-  Up
-  Down
-  Memory #1
-  Memory #2
-  Memory #3
-  Memory #4
-  Save / Setting









### NOTE:

After installing the entire system correctly, you need to perform Auto Stroke Learning before you start using it. For more information about Auto Stroke Learning operation guide, please refer to control box product data sheet, which can be downloaded from the Moteck website.

## • Operation

1. Press and hold button  , the actuator is extending, i.e. table is moving up.
2. Press and hold button  , the actuator is retracting, i.e. table is moving down.
3. Press and hold each button  ,  ,  or  , table will move to the memorized position accordingly and stop automatically.

## • Memory Setting

1. Press button  for 2 seconds until screen flashes. Followed by pressing button  , then screen will show  ; Release the button and the height read-out will be shown on screen and memorized as position 1.
2. The operation for memorize positions 2, 3 and 4 is similar to the one for position 1.
3. When the screen flashes after pressing button  for 2 seconds, if button  through  is not pressed within 20 seconds, the screen will stop flashing and leave the memory setting mode.

## • Error Code

About error code information and recommended disposition, please refer to control box product data sheet, which can be downloaded from the Moteck website.