

# Hand Control DP07

DP07 touch hand control is designed for lifting table. It not only features with 3-digit display for the height, but also supports position memory function that allows user to store up to 3 positions. The sliding mounting bracket design can be placed under the table when not in operation. Moreover, DP07 has optional USB charging port for 3C devices.

 


## Features and Options


---

- Main applications: Furniture
- Available number of touch buttons: 6
- Number of memory positions: 3
- 3-digit LED display for height read-out and error code
- Sliding mounting bracket
- Color: Black
- Cable length: 1500mm straight
- Optional USB charging port for 3C devices (Output 5V DC/1.5A)

## Dimensions

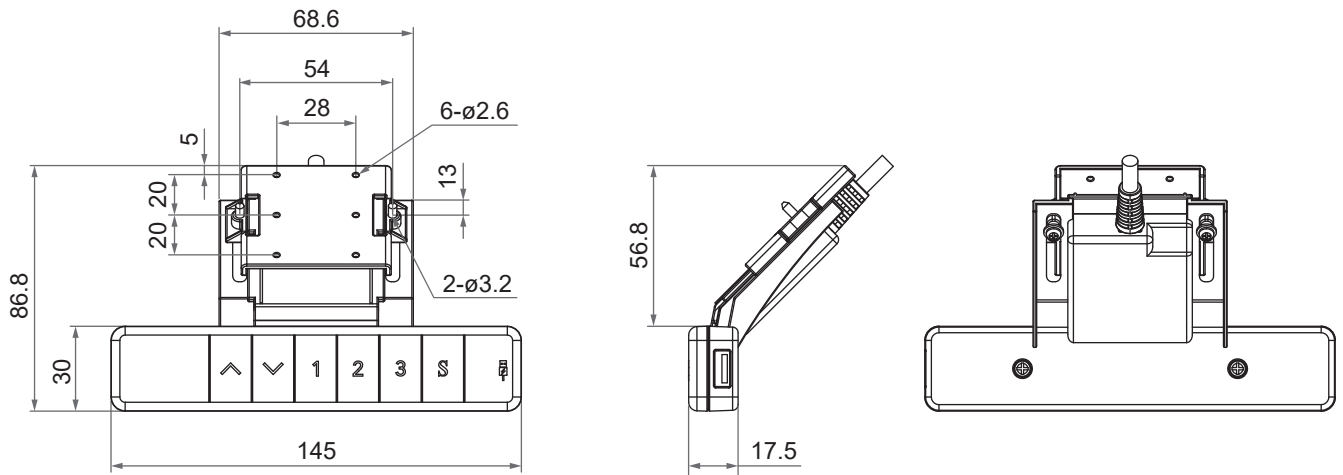

### Without USB charging port

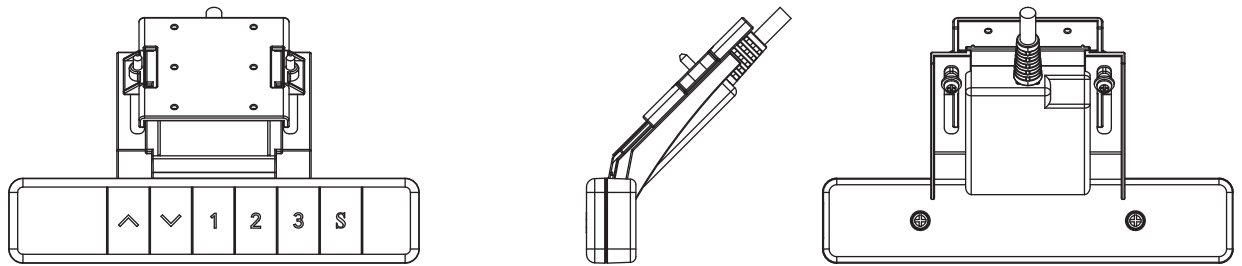 

Unit: mm

## Compatibility

Product	Model	DP07 spec
Control box	CF11D, CF13	With Moteck E2-type RJ plug (Fig. 1)

### Cable plug




Fig.1 E2-type

# Operating Guide

---
 
## • Interface Guide



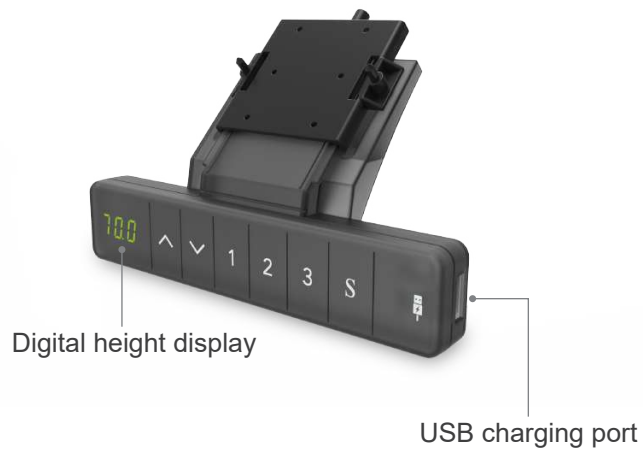


-  Up
-  Down
-  Memory #1
-  Memory #2
-  Memory #3
-  Save / Setting









### NOTE:

After installing the entire system correctly, you need to perform Auto Stroke Learning before you start using it. For more information about Auto Stroke Learning operation guide, please refer to control box product data sheet, which can be downloaded from the Moteck website.

## • Operation

1. Touch and hold button  , the actuator is extending, i.e. table is moving up.
2. Touch and hold button  , the actuator is retracting, i.e. table is moving down.
3. Touch and hold each button  ,  or  , table will move to the memorized position accordingly and stop automatically.

## • Memory Setting

1. Touch button  for 2 seconds until screen flashes. Followed by touching button  , then screen will show  ; Release the button and the height read-out will be shown on screen and memorized as position 1.
2. The operation for memorize positions 2 and 3 is similar to the one for position 1.
3. When the screen flashes after touching button  for 2 seconds, if button  through  is not pressed within 20 seconds, the screen will stop flashing and leave the memory setting mode.

## • Error Code

About error code information and recommended disposition, please refer to control box product data sheet, which can be downloaded from the Moteck website.

## Ordering Key

---

DP07- 6 - U

<b>Button</b>	<b>6:</b> 6 touch buttons
<b>USB port</b>	<b>0:</b> Without USB charging port <b>U:</b> 1x USB charging port

**Terms of Use**

The user is responsible for application suitability of Moteck products. As ongoing improvement process continues, products listed on the Moteck website are subject to change without prior notice. Moteck reserves the right to terminate the sales or remove any product displayed on the website, or listed in its catalogues.