

Manual

Actuator **ID10** series



Revision

2024.08_V3.0

Technical changes may be made to improve the product without notice !



Content

| 1. | Important Information | 3 |
|----|-----------------------------|----|
| 2. | Installation | 4 |
| | 2.1 Terminology | 4 |
| | 2.2 Mechanical installation | 4 |
| 3. | Restraining Torque | 5 |
| 4. | Manual Drive Connector | 5 |
| 5. | Wiring with Flying Leads | 6 |
| | 5.1 ID10 | 6 |
| | 5.2 ID10BT | 8 |
| | 5.3 ID10G | 9 |
| | 5.4 ID10K | 11 |
| | 5.5 ID10P | 13 |



1. Important Information




- Only qualified personnel are allowed to carry out the mechanical and electrical installation of this product. Qualified personnel should be familiar with the mechanical or electrical installation work and have corresponding work qualifications.
- Do not perform mechanical installation when the actuator is powered. Complete the mechanical installation first, and then perform the electrical installation.
- Do not hold the extension tube when the actuator is powered.
- Never disconnect any wires or connectors during operation or when power is applied.
- If you find any malfunction or damage to the actuator, please stop using it immediately and notify qualified personnel to take corrective measures.
- This appliance cannot be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.




2. Installation

2.1 Terminology

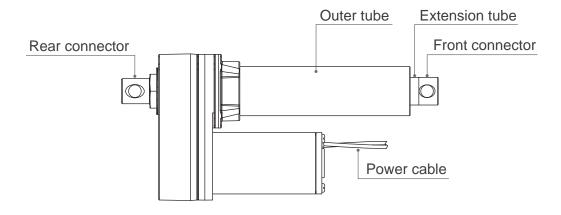

2.2 Mechanical installation

(1) Be sure that the load acts on the actuator in the axial direction and it isn't recommended to apply side load to the actuator.

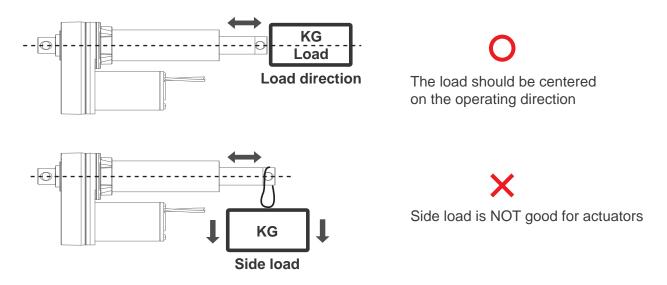


- (2) If the actuator is jammed by an obstruction or the load is severely overweight, the actuator's clutch protection device will trip and run idly to protect the actuator or the customer's mechanical equipment from damage. Please be careful to avoid obstructions and do not exceed the rated load of the actuator.
- (3) Users are forbidden to open the outer cover of the limit switch so as not to affect the original protection level of the actuator, resulting in the immediate failure of the original factory protection commitment.



3. Restraining Torque



- If the actuator needs to be test run before being installed on the operating frame, the front and rear connectors must be fixed first to limit the rotation of the extension tube. The torque is very large. If the front and rear connectors are not fixed, the extension tube (or the actuator) will rotate instead of moving.
- Please be careful of the rotation force of the extension tube and pay attention to personal safety.

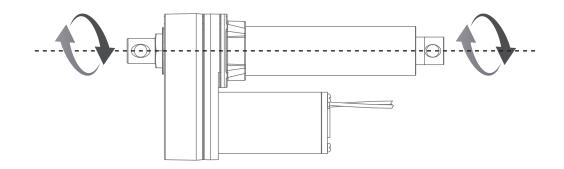

4. Manual Drive Connector


For ID10 only

• The MD (manual drive) is an alternative way to drive the motor directly, if the power is not available.

Step 1. Remove the plug on the gearbox cover.

Step 2. Use a 8.0mm hex bit or electric screwdriver (recommended) to drive the gear directly. Step 3. Insert the plug into the hole, and confirm the plug is installed properly.

- The Max, drive torque is 6kg-cm with 4500N load (Ball screw)
- The Max. drive torque is 6kg-cm with 4500N load (Ball screw).

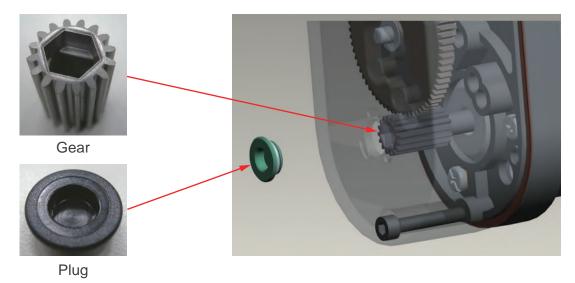



5. Wiring with Flying Leads

5.1 ID10

For ID10 actuator, connection rule of power wires varies according to different types and gear ratio(s). Please follow the instructions below.

- (1) Basic (Without limit switch nor positioning feedback)
 - Gear ratio: 5:1, 10:1, 20:1

| | Wire color | Definition | Descriptions |
|-------|------------|------------|---|
| Power | Red | | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to |
| wires | Black | | extend the actuator. Switch the polarity of DC input to retract it. |

• Gear ratio: 30:1, 40:1

| | Wire color | Definition | Descriptions |
|-------|------------|------------|---|
| Power | Red | DC power | Connect red wire to "Vdc -" & black wire to "Vdc +" of DC power to |
| wires | Black | | extend the actuator. Switch the polarity of DC input to retract it. |

(2) With limit switches

| | Wire color | Definition | Descriptions |
|-------|------------|------------|---|
| Power | Red | DC power | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to |
| wires | Black | Do power | extend the actuator. Switch the polarity of DC input to retract it. |

(3) With single Hall effect sensor positioning feedback

| | Wire color | Definition | Descriptions |
|-----------------|------------|---|---|
| Power | Red | DC power | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to |
| wires | Black | DC power | extend the actuator. Switch the polarity of DC input to retract it. |
| | White | Vin | Voltage input range: 5 ~ 20V |
| Signal wires | Yellow | Hall output | High= Input - 1.2V (±0.6V) Low= GND Hall signal data: |
| | | Hall effect sensor resolution: 20ppi, 1.27mm/pulse (0.787pulses/mm) | |
| | Blue | GND | |



| (4) | With Potentiometer | (POT) | absolute | positioning fe | edback |
|-----|--------------------|-------|----------|----------------|--------|
|-----|--------------------|-------|----------|----------------|--------|

| | Wire color | Definition | Descriptions | | | | | |
|-----------------|-----------------|--|--|--------------------------------|--|--|--|--|
| Power wires | Red Black | DC power | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to extend the actuator. Switch the polarity of DC input to retract it. | | | | | |
| | Yellow | Vin Input voltage 70V max. | | | | | | |
| Signal wires | Blue POT output | Potentiometer specification: 10K ohm, 10 turns. Total resistance tolerance ±5% Independent linearity ±0.25% Output voltage: The voltage (resistance) between blue and white increases linearly from about 0 when the actuator extends, and decreases when it retracts. B W - (Y) - (| | | | | | |
| | | | Stroke (mm) | Resistance (Tolerance: ±0.3KΩ) | | | | |
| | | | 102 (4") | 0.3 ~ 8.1K | | | | |
| | | | 153 (6") | 0.3 ~ 8.7K | | | | |
| | | | 203 (8") | 0.3 ~ 9.2K | | | | |
| | | | 254 (10") | 0.3 ~ 7.4K | | | | |
| | | | 305 (12") | 0.3 ~ 8.8K | | | | |
| | | | 457 (18") | 0.3 ~ 9.4K | | | | |
| | | | 610 (24") | 0.1 ~ 9.9K | | | | |
| | White | GND | | | | | | |



5.2 ID10BT

(1) Basic (Without positioning feedback)

| | Wire color | Definition | Descriptions |
|-------|------------|------------|---|
| Power | Red | DC power | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to |
| wires | Black | | extend the actuator. Switch the polarity of DC input to retract it. |

(2) With Potentiometer (POT) absolute positioning feedback

| | Wire color | Definition | Descri | iptions | | | | |
|-----------------|-----------------|--|---|--------------------------------|--|--|--|--|
| Power | Red | DC power | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to | | | | | |
| wires | Black | | extend the actuator. Switch the polarity of DC input to retract it. | | | | | |
| | Yellow | Vin | Input voltage 70V max. | | | | | |
| Signal wires | Blue POT output | Potentiometer specification: 10K ohm, 10 turns. Total resistance tolerance ±5% Independent linearity ±0.25% Output voltage: The voltage (resistance) between blue and vincreases linearly from about 0 when the actuator extends, a decreases when it retracts. Image: Comparison of the stroke length (as table below) | | | | | | |
| | | | Stroke (mm) | Resistance (tolerance: ±0.3KΩ) | | | | |
| | | | 102 (4") | 0.3 ~ 8.1K | | | | |
| | | | 153 (6") | 0.3 ~ 8.7K | | | | |
| | | | 203 (8") | 0.3 ~ 9.2K | | | | |
| | | | 254 (10") | 0.3 ~ 7.4K | | | | |
| | | | 305 (12") | 0.3 ~ 8.8K | | | | |
| | | | 457 (18") | 0.3 ~ 9.4K | | | | |
| | White | GND | | | | | | |



5.3 ID10G

(1) Basic, with limit switches.

| | Wire color | Definition | Descriptions |
|-------|------------|------------|---|
| Power | Red | DC power | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to |
| wires | Black | | extend the actuator. Switch the polarity of DC input to retract it. |

(2) With single Hall effect sensor positioning feedback

| | Wire color | Definition | Descriptions |
|-----------------|------------|-------------|---|
| Power | Red | DC power | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to |
| wires | Black | Doponor | extend the actuator. Switch the polarity of DC input to retract it. |
| | Yellow | Vin | Voltage input range: 5 ~ 20V |
| Signal wires | Blue | Hall output | High= Input - 1.2V (±0.6V) Low= GND Hall signal data: |
| | White | GND | |



| (3) | With Potentiometer | (POT) | absolute | positioning | feedback |
|-----|--------------------|-------|----------|-------------|----------|
|-----|--------------------|-------|----------|-------------|----------|

| | Wire color | Definition | Descr | iptions | |
|-----------------|--------------|------------|--|--|--|
| Power wires | Red Black | DC power | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to extend the actuator. Switch the polarity of DC input to retract it. | | |
| | Yellow | Vin | Input voltage 70V max. | | |
| Signal wires | Blue | POT output | Potentiometer specification: 10K ohm, 10 turns. Total resistance tolerance ±5% Independent linearity ±0.25% Output voltage: The voltage (resistance) between blue and white increases linearly from about 0 when the actuator extends, and decreases when it retracts. B W - (Y) Actuator extends There are different resolutions according to the stroke length (as table below) | | |
| | | | Stroke (mm) | Resistance (Tolerance: $\pm 0.3 K\Omega$) | |
| | | | 102 (4") | 0.3 ~ 5.2K | |
| | | | 153 (6") | 0.3 ~ 5.5K | |
| | | | 203 (8") | 0.3 ~ 5.9K | |
| | | | 254 (10") | 0.3 ~ 7.3K | |
| | | | 305 (12") | 0.3 ~ 5.6K | |
| | | | 457 (18") | 0.3 ~ 6.0K | |
| | | | 610 (24") | 0.3 ~ 6.4K | |
| | White | GND | | | |



5.4 ID10K

For ID10K actuator, connection rule of power wires varies according to different types and gear ratio(s). Please follow the instructions below.

- (1) Basic (Without limit switch nor positioning feedback)
 - Gear ratio: 20:1

| | Wire color | Definition | Descriptions |
|-------|----------------|--|---|
| Power | r Red DC power | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to | |
| wires | Black | DO POWEI | extend the actuator. Switch the polarity of DC input to retract it. |

• Gear ratio: 40:1

| | Wire color | Definition | Descriptions |
|-------|------------|------------|---|
| Power | Red | DC power | Connect red wire to "Vdc -" & black wire to "Vdc +" of DC power to |
| wires | Black | | extend the actuator. Switch the polarity of DC input to retract it. |

(2) With limit switches

| | Wire color | Definition | Descriptions |
|-------|-------------|------------|---|
| Power | Red | DC power | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power t |
| wires | wires Black | Do power | extend the actuator. Switch the polarity of DC input to retract it. |

(3) With single Hall effect sensor positioning feedback

| | Wire color | Definition | Descriptions | |
|-----------------|------------|-------------|---|--|
| Power | Red | DC power | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to | |
| wires | Black | | extend the actuator. Switch the polarity of DC input to retract it. | |
| | Yellow | Vin | Voltage input range: 5 ~ 20V | |
| Signal wires | Blue | Hall output | High= Input - 1.2V (±0.6V) Low= GND Hall signal data: | |
| | | | Hall effect sensor resolution: 1.0 pulse/mm | |
| | White | GND | | |



| (4) | With Potentiometer | (POT) | absolute | positioning | feedback |
|-----|--------------------|-------|----------|-------------|----------|
|-----|--------------------|-------|----------|-------------|----------|

| | Wire color | Definition | Descr | iptions |
|-----------------|--------------|------------|--|---|
| Power wires | Red Black | DC power | Connect red wire to "Vdc +" & bla extend the actuator. Switch the p | ack wire to "Vdc -" of DC power to olarity of DC input to retract it. |
| | Yellow | Vin | Input voltage 70V max. | |
| Signal wires | Blue | POT output | Potentiometer specification: 10K ohm, 10 turns. Total resistance tolerance ± Independent linearity ±0.25^o Output voltage: The voltage (resince ases linearly from about 0 decreases when it retracts. | % esistance) between blue and white 0 when the actuator extends, and //(Y) Actuator extends |
| | | | Stroke (mm) | Resistance (Tolerance: ±0.3KΩ) |
| | | | 102 (4") | 0.3 ~ 7.3K |
| | | | 153 (6") | 0.3 ~ 8.7K |
| | | | 203 (8") | 0.3 ~ 7.3K |
| | | | 254 (10") | 0.3 ~ 9.1K |
| | | | 305 (12") | 0.3 ~ 7.9K |
| | | | 457 (18") | 0.3 ~ 9.4K |
| | | | 610 (24") | 0.3 ~ 8.2K |
| | White | GND | | |



5.5 ID10P

(1) Basic, with limit switches.

| | Wire color | Definition | Descriptions |
|-------|------------|------------|---|
| Power | Red | | Connect red wire to "Vdc +" & black wire to "Vdc -" of DC power to |
| wires | Black | | extend the actuator. Switch the polarity of DC input to retract it. |

(2) With Potentiometer (POT) absolute positioning feedback

| | Wire color | Definition | Desc | riptions |
|-----------------|--|------------|--|---|
| Power wires | Red Black | DC power | Connect red wire to "Vdc +" & b extend the actuator. Switch the | lack wire to "Vdc -" of DC power to polarity of DC input to retract it. |
| | Yellow | Vin | Input voltage 70V max. | |
| Signal wires | Signal wires Blue POT output 1. Potentiometer specification: - 10K ohm, 10 turns. - Total resistance tolerance ±5% - Independent linearity ±0.25% 2. Output voltage: The voltage (resi increases linearly from about 0 w decreases when it retracts. Image: Blue POT output Image: The voltage of | | 5% resistance) between blue and white 0 when the actuator extends, and | |
| | | | 102 (4") | 0.3 ~ 8.1K |
| | | | 203 (8") | 0.3 ~ 9.2K |
| | | 305 (12") | 0.3 ~ 8.8K | |
| | White | GND | | |

Terms of Use

The user is responsible for the suitability of MOTECK products, and the products listed on the MOTECK website are subject to change without notice. MOTECK reserves the right to terminate sales or delete any products displayed on the website or listed in its catalog.