

Hand Switch (Model: HZ01, HZ03, HZ04, HZ05, HZ06)

HZ01, HZ03, HZ04, HZ05 and HZ06 are embedded hand control designed for recliner.

Installation


HZ01, HZ03, HZ04, HZ05 and HZ06 hand control has the same steps of installation.
(HZ03 is used as an example here.)

► Step 1



Separate the base and the upper part.

► Step 2

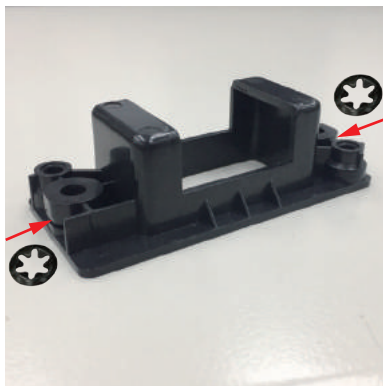

Insert the two circlips at the base part.

► Step 3



Insert the circlip at the position of the base part as shown above.

► Step 4



Fix the base part on the frame.

► Step 5




Fix the two screws at the diagonal position.

► Step 6



Please connect actuator to confirm button definition "UP" or "Down", before installing the upper part on the frame.

► Step 7

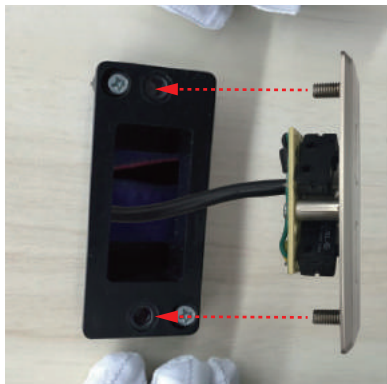

Put the upper part into the base part.

► Step 8



Press the upper part from top until it's firmly in place.